 


AU/NZ29257




Trim Line Memory Phone User Guide


DESK OR TABLETOP INSTALLATION

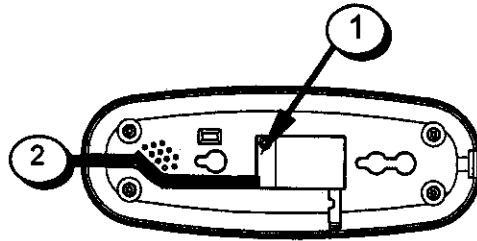

1. Plug one end of the line cord into the socket located in the pocket of the base.
2. Run the line cord through the guides in the base of the telephone.
3. Connect the other end of the line cord into the telephone line socket.

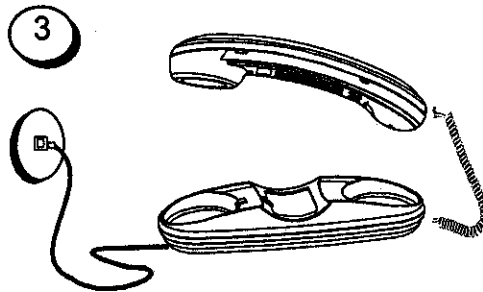


WALL MOUNT INSTALLATION

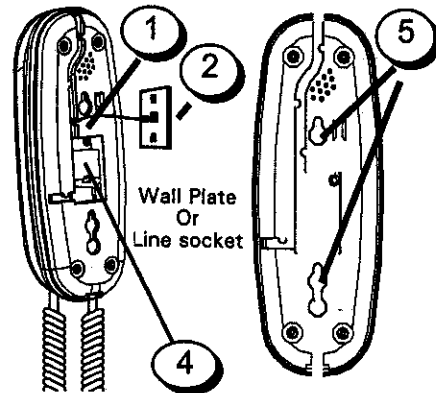

1. Plug one end of the line cord into the socket located in the pocket of the base.
2. If you are using a wall plate (not included with this phone), plug the other end of the line cord into the wall plate. If you are not using a wall plate, plug the other end into the telephone line socket.

You can mount the phone by fixing two suitable screws to the wall, 85 mm apart. Leave the heads of the screws raised 3mm from the wall.

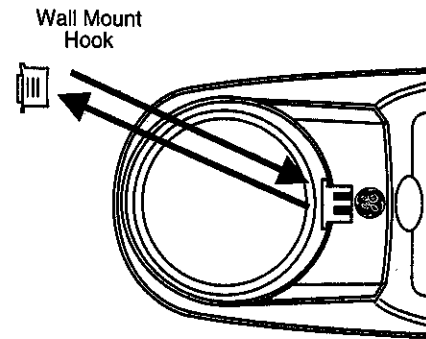

3. Remove the wall mount hook located in the cradle of the telephone, rotate it in the position as shown above and re-insert in place.
4. Tuck any excess line cord into the pocket of the base.
5. Position the mounting holes over the mounting posts of the wall plate or mounting screws if you are not using a wall plate and slide down until the phone is firmly in place.

IMPORTANT SAFETY INFORMATION

1. Unplug this product from the wall socket before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
2. Do not use this product near water, for example near a bathtub, shower or pool.
3. Do not use this product during a thunderstorm. There may be a remote risk of electric shock from lightning.

WARNING


Telephone receivers produce a magnetic field that can attract small magnetic objects such as pins and staples. To avoid the possibility of injury, do not place the handset where such objects may be picked up.

WARRANTY

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alteration that affects the performance or reliability of the product.

If warranty is required you should contact the store where you purchased this telephone together with the proof of purchase.

CONTROLS AND FUNCTIONS

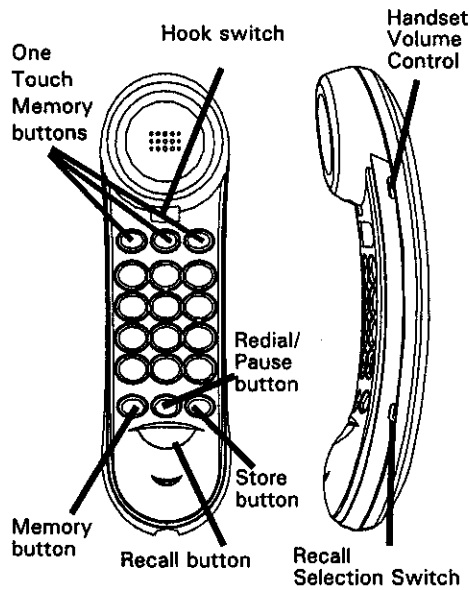

SETTINGS

Recall Selection Switch

Select the appropriate country Recall timing using the switch labeled "recall" in the handset of the telephone.

**IN AUSTRALIA, SET TO 100,
IN NEW ZEALAND, SET TO 600.**

Recall timing allows you to use special network features as provided by your service provider, eg Call Waiting.

RINGER SWITCH

Select the ringer level using the slide switch in the base of the telephone.

HANDSET VOLUME CONTROL

Adjust the handset receiver volume level as required using the switch labeled "vol ● ● ●"


USING THE PHONE

TO MAKE A CALL:

1. Lift the handset and listen for dial tone.
2. Dial the number.

TO ANSWER A CALL:

1. Lift the handset and talk.
2. Replace the handset to end the call.

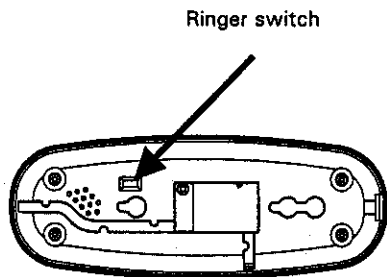

LAST NUMBER REDIAL

To make a repeat call to the last number you dialed:

1. Lift the handset and listen for dial tone.
2. Press the [redial/pause] button.

STORING A NUMBER IN MEMORY

Each memory location is capable of storing numbers up to 16 digits. The memory locations a,b,c are accessible by one button press. Locations 1 to 9 on the keypad require you to press the [mem] button for access.

To store numbers in memory:

1. Pick up the handset.
2. Press the [store] button.
3. Dial the number to be stored (up to 16 digits).
4. Press the [store] button again.
5. Press a memory location (a,b,c or 1 to 9 on the keypad).
6. Record the name or number on the directory label in the cradle.
7. Replace the handset.

INSERTING A PAUSE IN THE DIALLING SEQUENCE

Use the [redial/pause] button to add pauses to a dialling sequence.

CHANGING A STORED NUMBER

To change a stored number, you just overwrite the memory location by using the procedure for storing a number.

DIALLING A STORED NUMBER

1. Lift the handset and listen for dial tone.
2. Press a,b or c to access those stored numbers directly or press the [mem] button followed by the memory location on the keypad (1 to 9).

RECALL BUTTON

The [recall] button allows you to access special network features provided by your service provider such as Call Wait, Conference and Enquiry. It also allows you to use special features of your PABX (if you are connected to one) such as call transfer.

NOTICE – NEW ZEALAND ONLY

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum condition for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty.

Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.