
5.2 SpeedTouch™ Default Configuration

How to perform a hardware reset to factory defaults

Proceed as follows:

- 1 Make sure the SpeedTouch™ is powered on.
- 2 Power off the SpeedTouch™ by pressing the power button until all LEDs turn off.
- 3 Press the power button once again (shortly).
- 4 As soon as the Power/System LED is flashing green, press the power button once more (shortly).
- 5 The Power/System LED stops flashing to become solid green. After six seconds, it starts flashing green again. Press the power button once more (shortly).
- 6 All LEDs flash green once.
- 7 The SpeedTouch™ reboots and will come online with factory default settings.

Resetting the system to its factory defaults also involves deleting the configuration profile settings. You may, therefore, need to reconfigure the system using the SpeedTouch™ Setup wizard or by uploading the relevant configuration file. See “1.3 SpeedTouch™ Configuration Setup” on page 19 for more information.